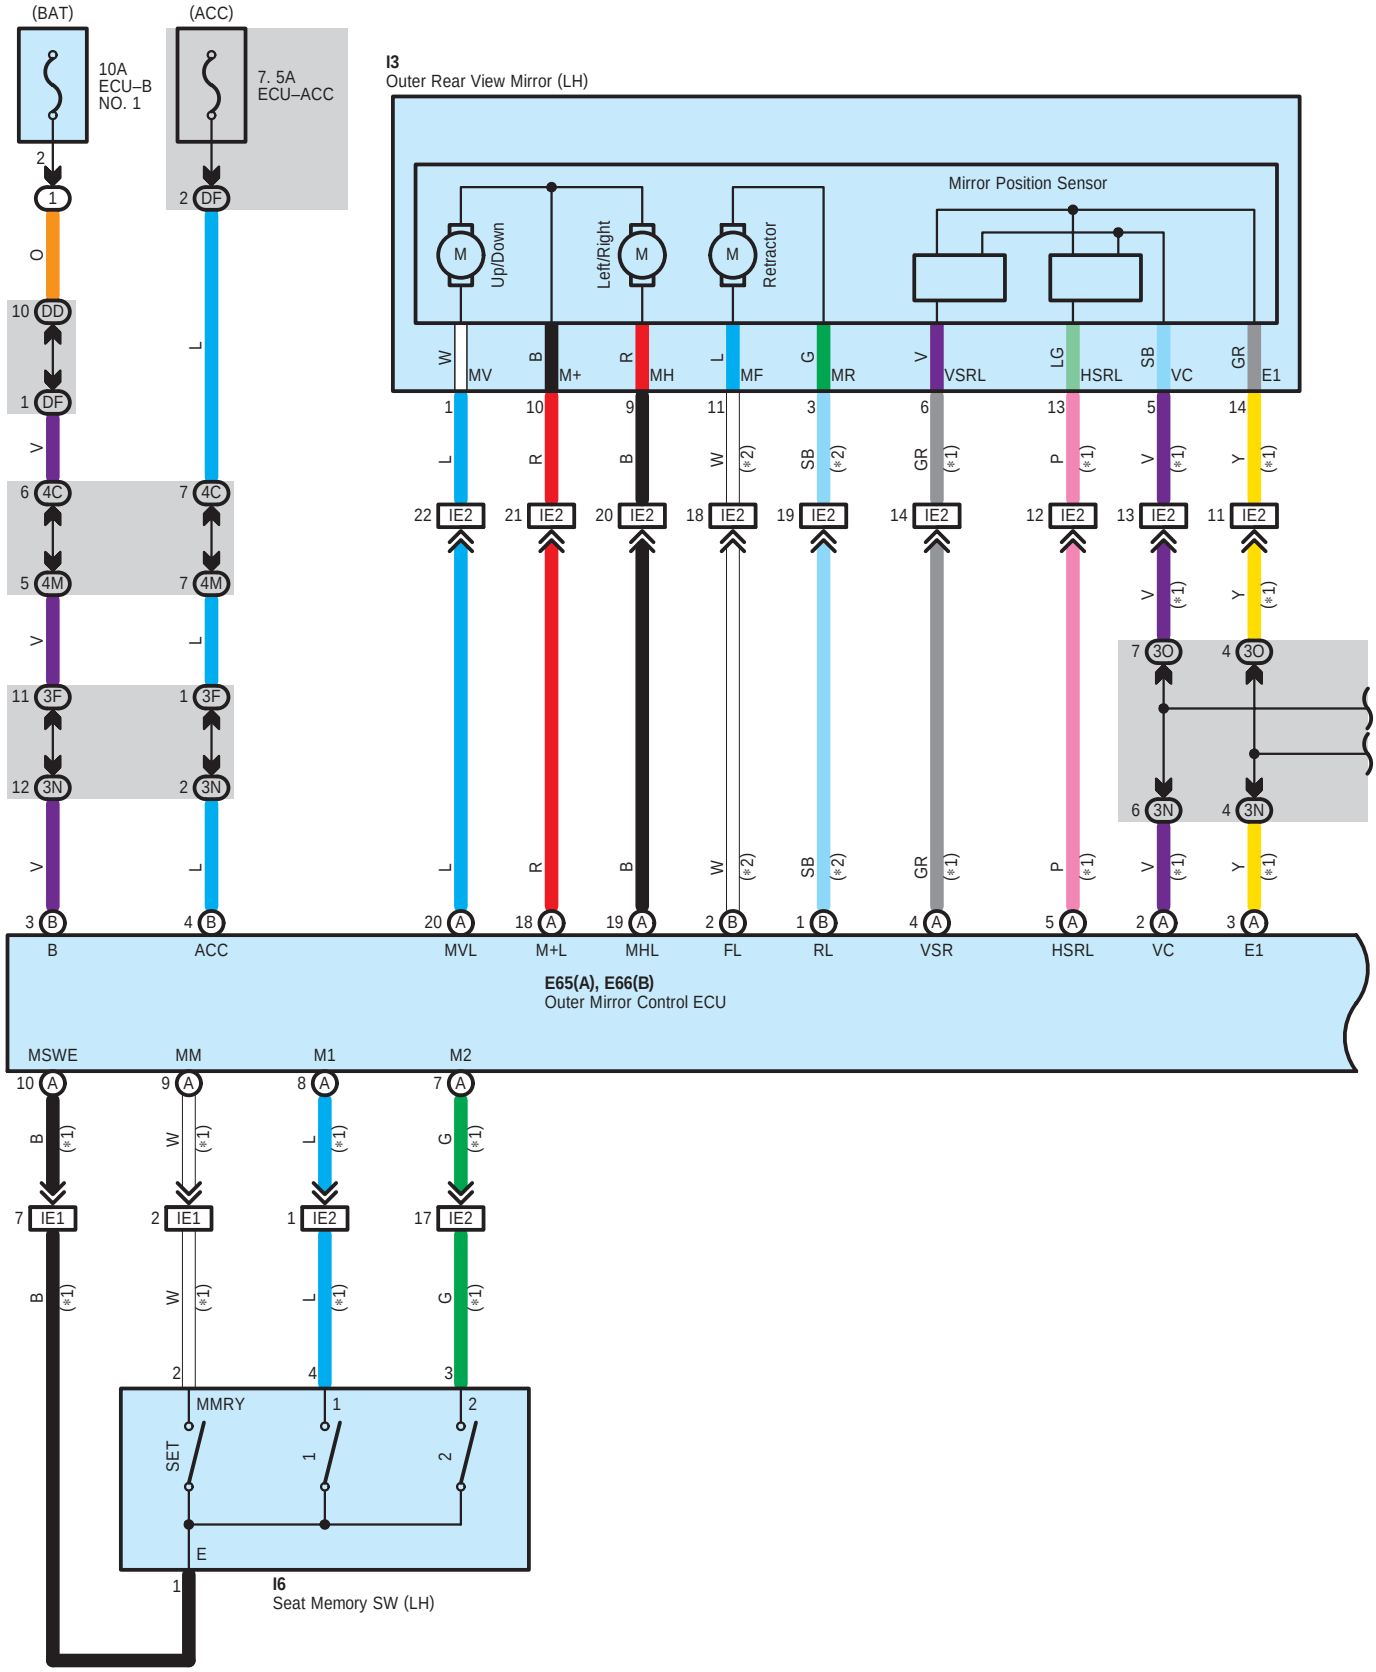
(BAT)
(ACC)
10A
ECU–B
NO. 1
7. 5A
ECU–ACC
I3
Outer Rear View Mirror (LH)
Mirror Position Sensor
Up/Down
Left/Right
Retractor
MV
M+
MH
MF
MR
VSRL
HSRL
VC
E1
MVL
M+L
MHL
FL
RL
VSR
HSRL
VC
E1
B
ACC
E65(A), E66(B)
Outer Mirror Control ECU
MSWE
MM
M1
M2
IE1
IE2
MMRY
SET
E
I6
Seat Memory SW (LH)

∗ 1 : w/ Seat Position Memory
∗ 2 : w/ Retractor

H4
Outer Rear View Mirror (RH)

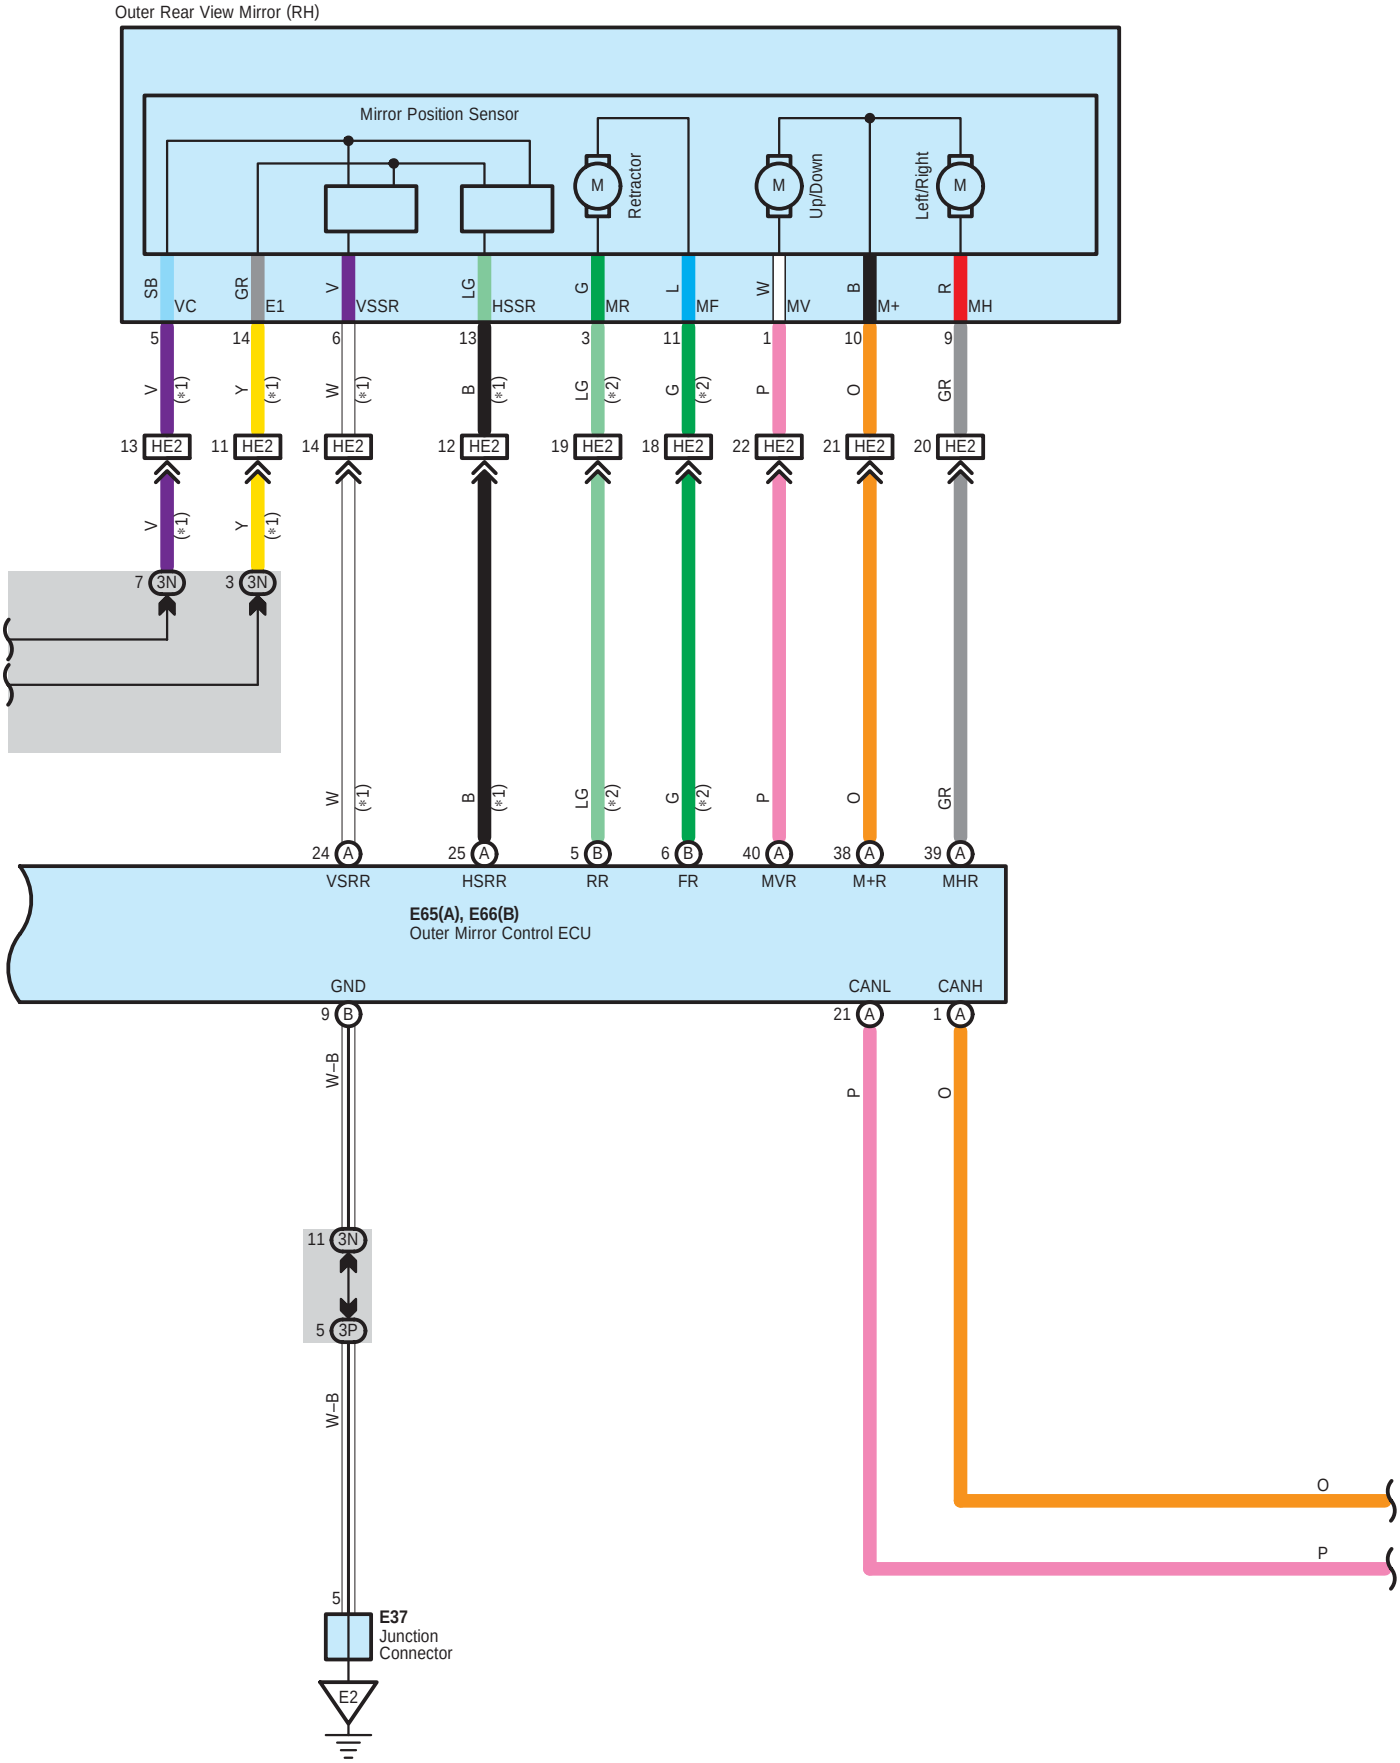

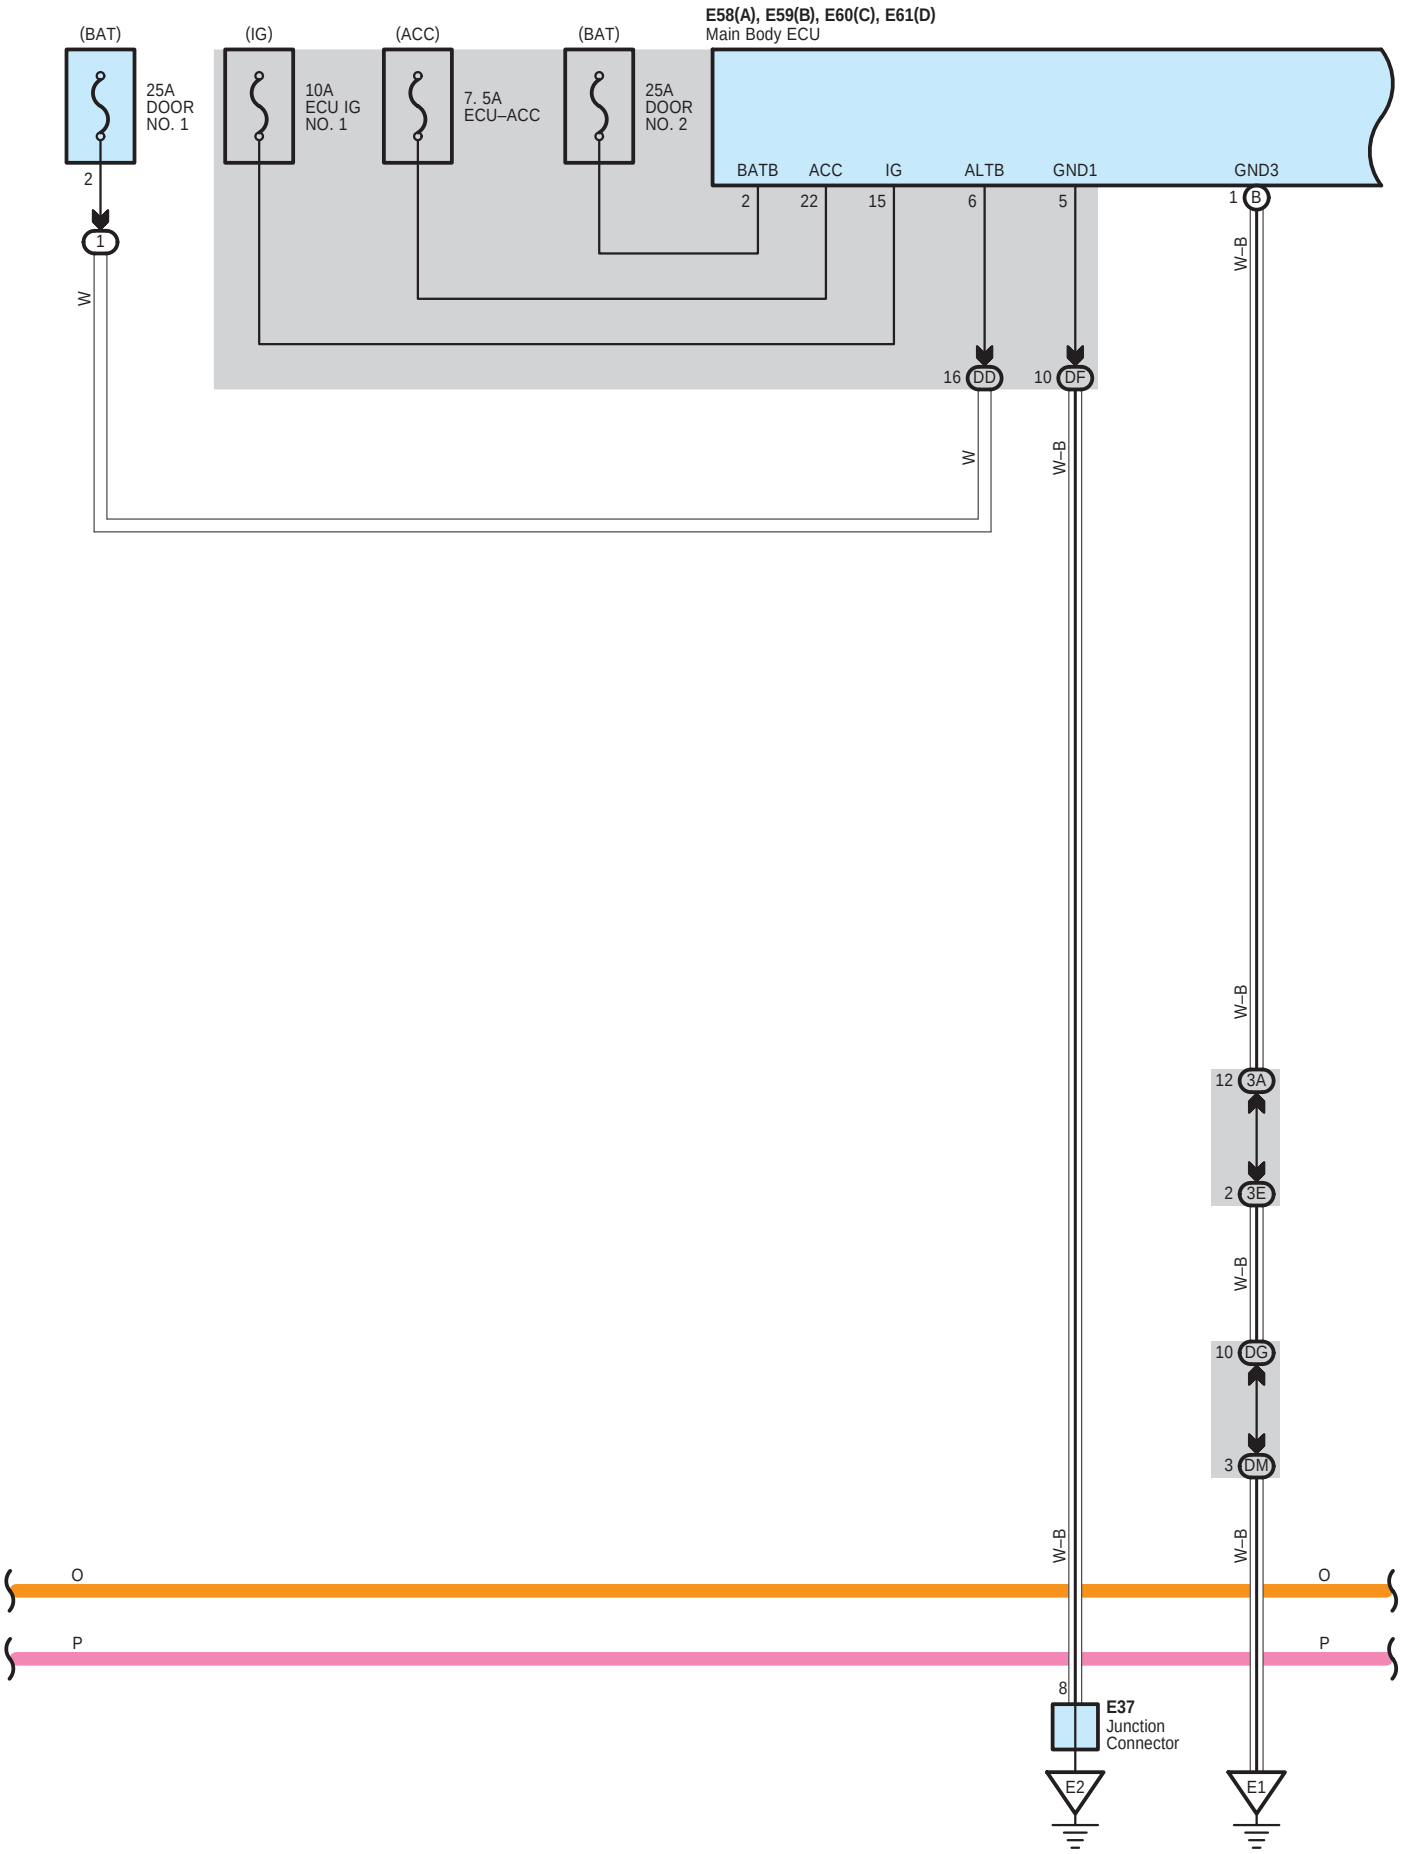
(BAT)
(IG)
(ACC)
(BAT)
E58(A), E59(B), E60(C), E61(D)
Main Body ECU
25A
DOOR
NO. 1
10A
ECU IG
NO. 1
7. 5A
ECU–ACC
25A
DOOR
NO. 2
BATB
ACC
IG
ALTB
GND1
GND3
2
22
15
6
5
1
B
2
1
W
W–B
16
DD
10
DF
W
W–B
W–B
12
3A
2
3E
W–B
10
DG
3
DM
W–B
W–B
O
O
P
P
8
E37
Junction
Connector
E2
E1

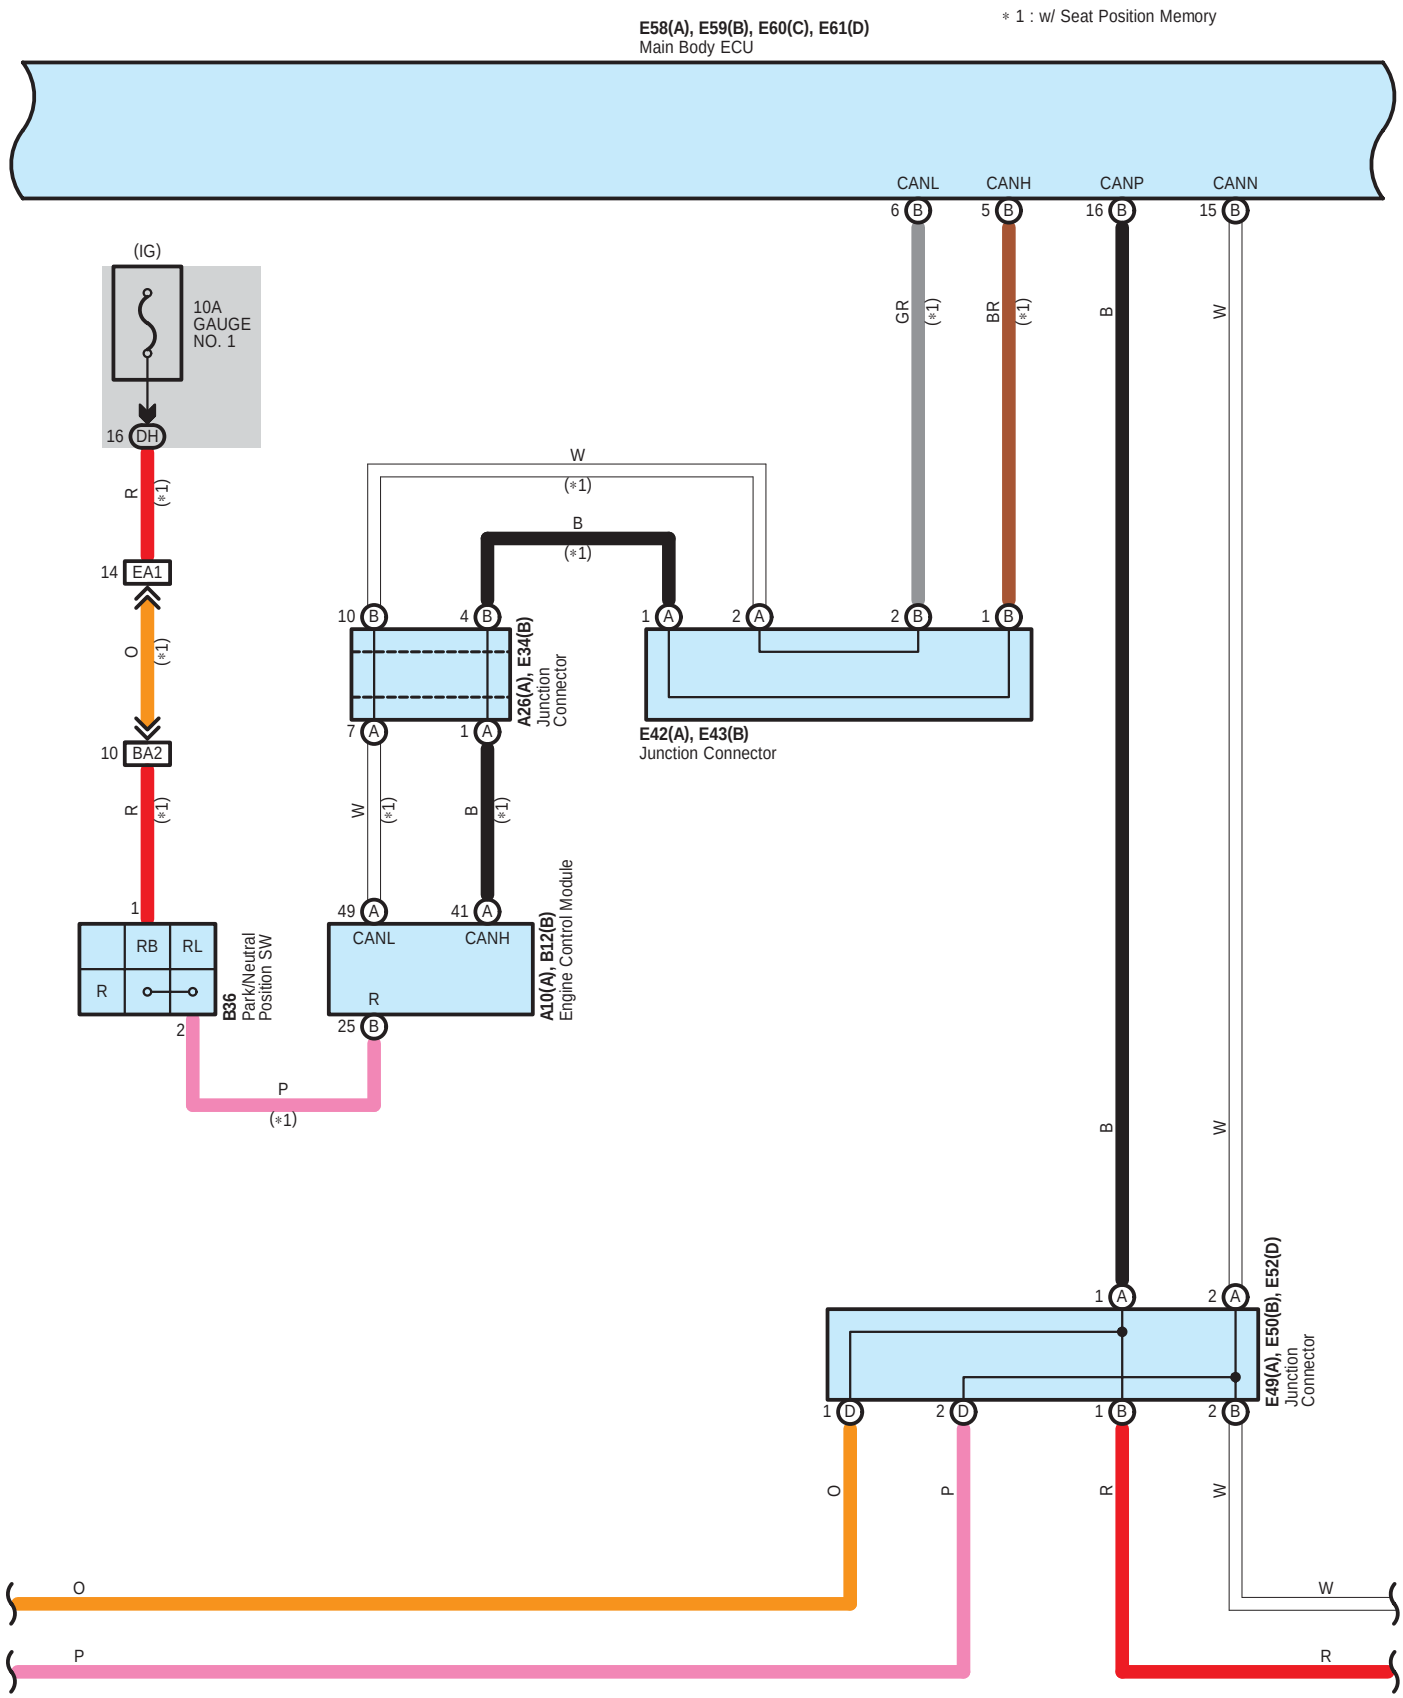
∗1 : w/ Seat Position Memory
E58(A), E59(B), E60(C), E61(D)
Main Body ECU
CANL
CANH
CANP
CANN
(IG)
10A
GAUGE
NO. 1
16 DH
14 EA1
10 BA2
1
RB
RL
R
B36
Park/Neutral
Position SW
2
P
(∗1)
25 B
49 A
41 A
CANL
CANH
R
A10(A), B12(B)
Engine Control Module
A26(A), E34(B)
Junction
Connector
E42(A), E43(B)
Junction Connector
E49(A), E50(B), E52(D)
Junction
Connector
O
P
R
W
B
GR
BR
(∗1)

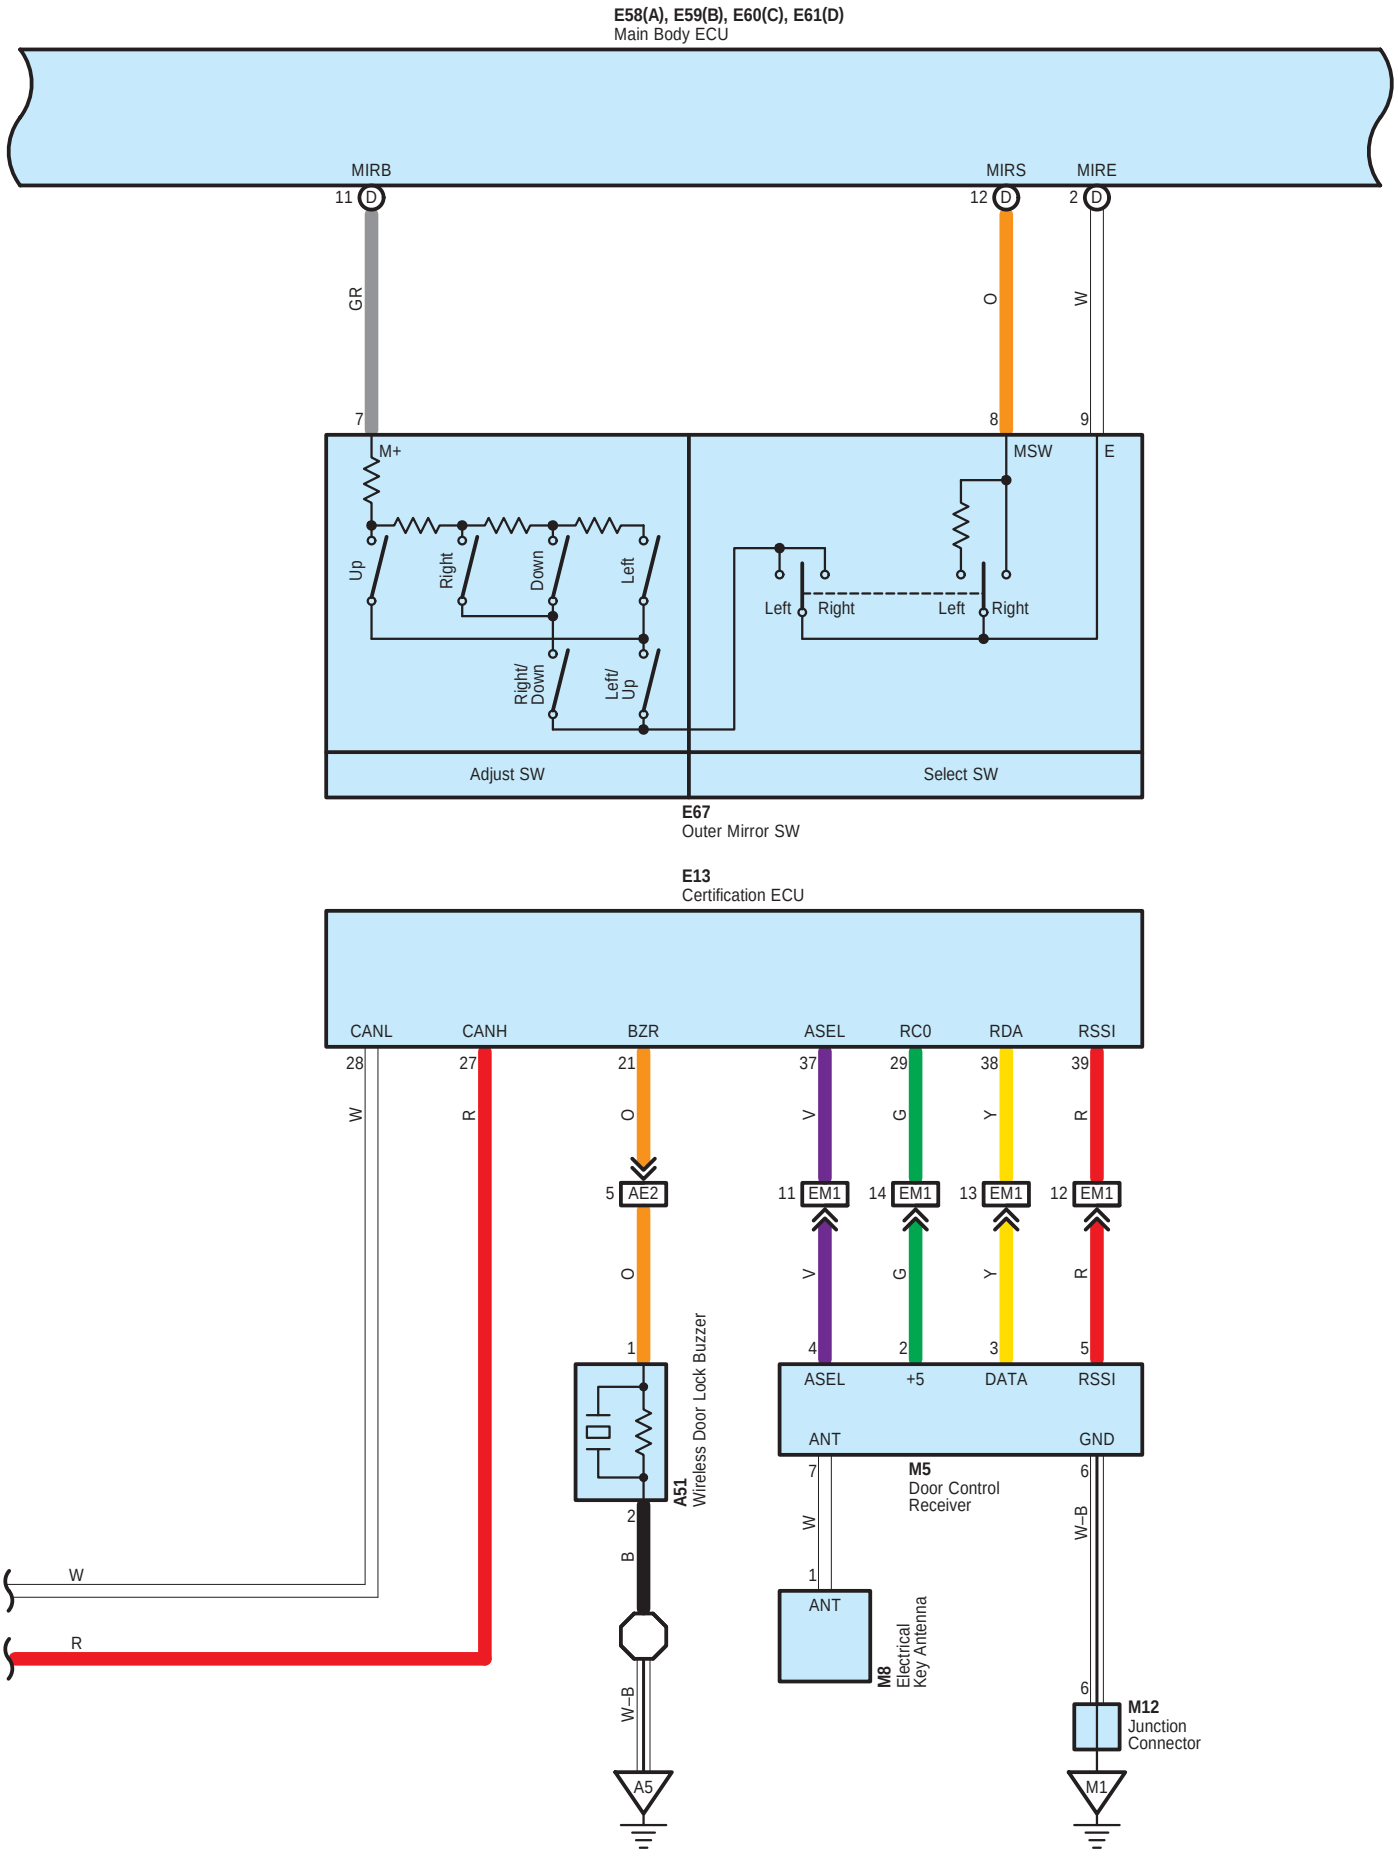
E58(A), E59(B), E60(C), E61(D)
Main Body ECU
MIRB
MIRS
MIRE
11 D
12 D
2 D
GR
O
W
7
8
9
M+
MSW
E
Up
Right
Down
Left
Right/ Down
Left/ Up
Left
Right
Left
Right
Adjust SW
Select SW
E67
Outer Mirror SW
E13
Certification ECU
CANL
CANH
BZR
ASEL
RC0
RDA
RSSI
28
27
21
37
29
38
39
W
R
O
V
G
Y
R
5 AE2
11 EM1
14 EM1
13 EM1
12 EM1
O
V
G
Y
R
1
4
2
3
5
A51
Wireless Door Lock Buzzer
ASEL
+5
DATA
RSSI
ANT
GND
M5
Door Control Receiver
7
6
W
W–B
1
6
ANT
M8
Electrical Key Antenna
M12
Junction Connector
W
R
B
W–B
A5
M1

∗ 2 : w/ Retractor

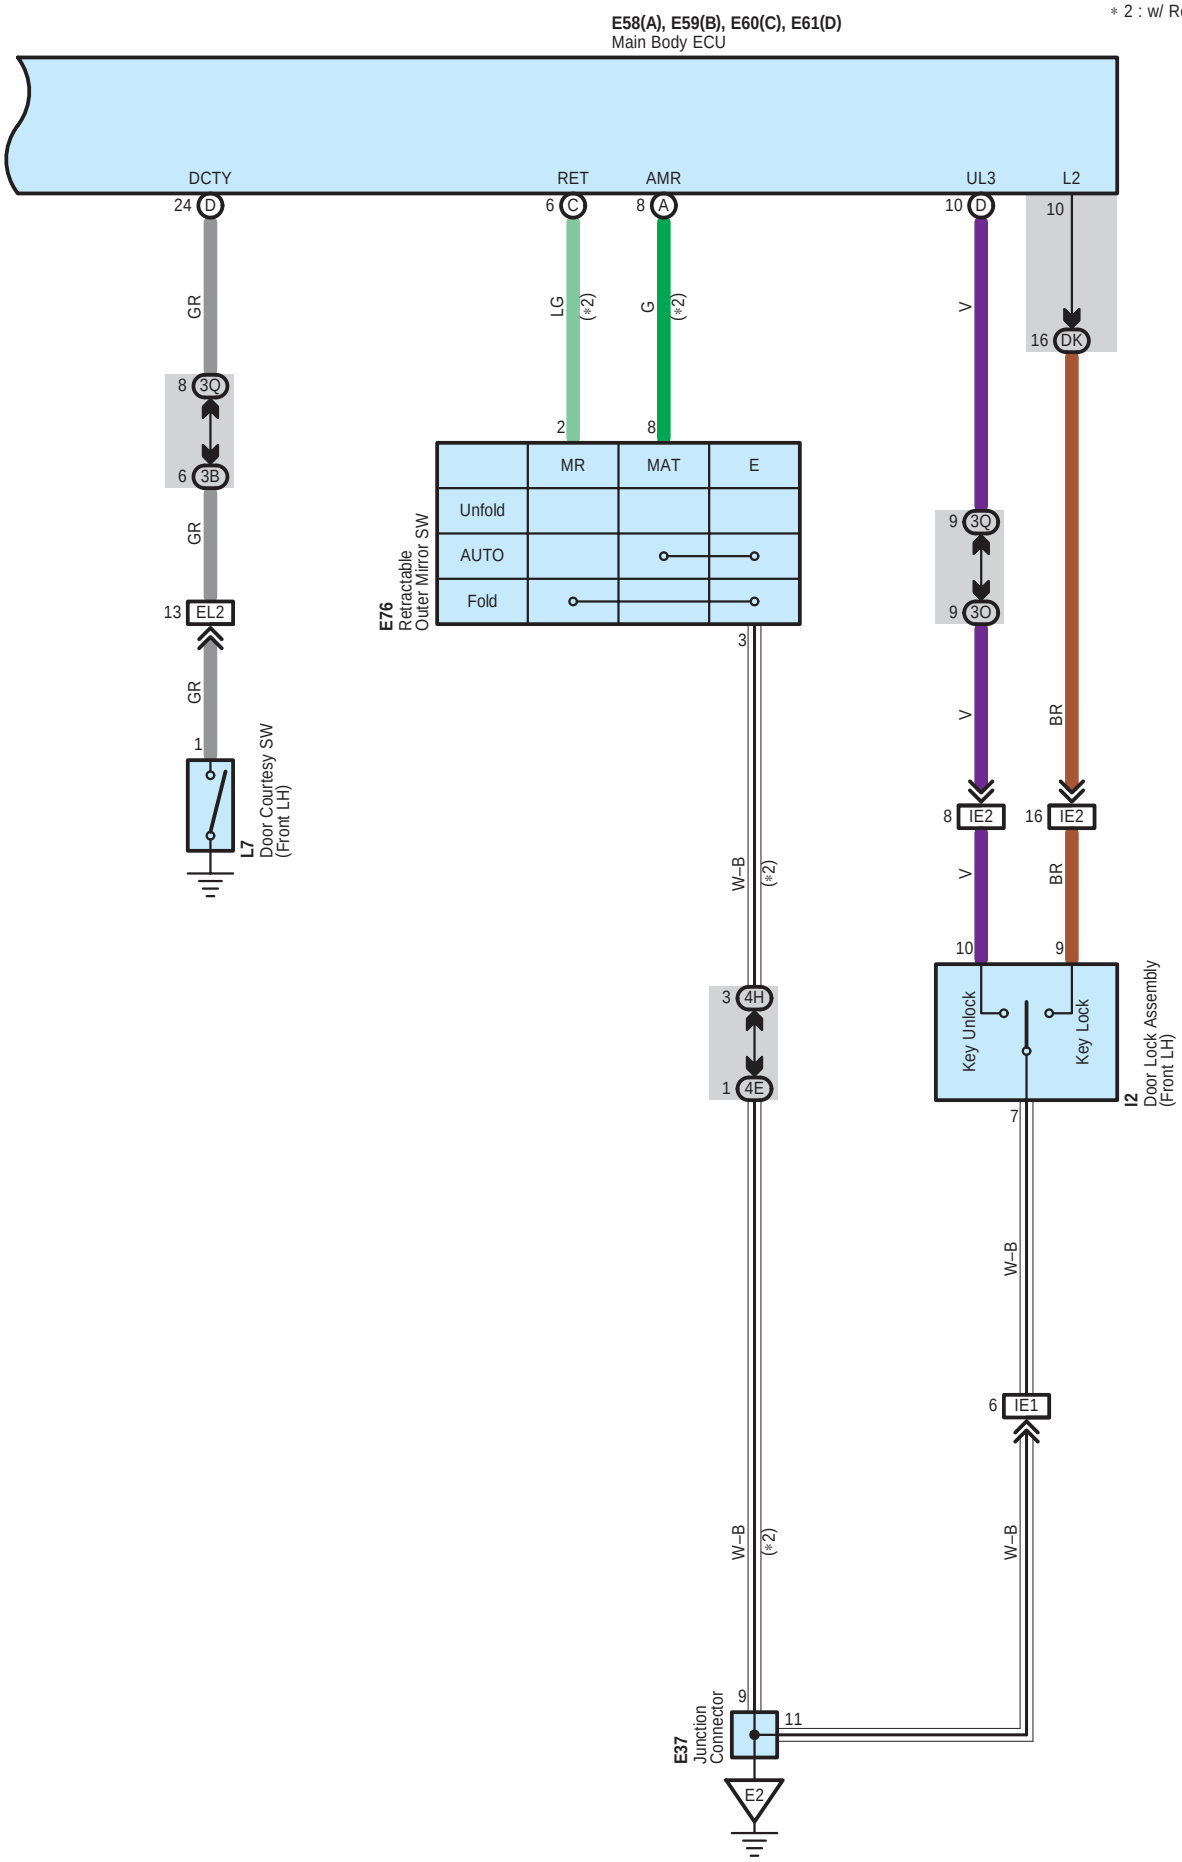

Remote Control Mirror

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
A10	A	54	E49	A	50, 59	E76	59
A26	A	60	E50	B	50, 59	H4	63
A51		55	E52	D	50, 59	I2	63
B12	B	56	E58	A	59	I3	63
B36		57	E59	B	59	I6	63
E13		58	E60	C	59	L7	62
E34	B	58	E61	D	59	M5	62
E37		58	E65	A	59	M8	62
E42	A	48, 59	E66	B	59	M12	62
E43	B	48, 59	E67		59		

⬭ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

⬭ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	36	Instrument Panel Wire and J/B No.3 (Instrument Panel Left)
3B		
3E		
3F		
3N		
3O		
3P		
3Q		
4C	42	Instrument Panel Wire and J/B No.4 (Instrument Panel Right)
4E		
4H		
4M		
DD	30	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
DF	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
DG	31	
DH		
DK	30	
DM		

▭ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AE2	69	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Left)
BA2	68	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B and Engine Room J/B)
EA1	69	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
EL2	69	Instrument Panel Wire and Floor Wire (Left Kick Panel)
EM1	69	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
HE2	69	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IE1	69	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		

▽ : **Ground Points**

Code	See Page	Ground Points Location
A5	69	Cowl Side Left
E1	69	Left Side of the Instrument Panel Reinforcement
E2	69	Instrument Panel Brace LH
M1	70	Roof Side Rear Inner Panel RH